

# ETÓN SOUND 100

## OPERATION MANUAL



AM/FM RADIO

*eton*

*eton*

---

## DO YOU NEED HELP? Contact Us.

If you need help, please contact us, Monday-Friday, 8:30 a.m.-4:00 p.m., North American Pacific Time. 1-800-872-2228 from the U.S; 1-800-637-1648 from Canada; 650-903-3866, worldwide; FAX: 650-903-3867; web site, [www.etoncorp.com](http://www.etoncorp.com); Etón Corporation , 1015 Corporation Way, Palo Alto, CA 94303, USA

## WARNING

- Do not expose this appliance to rain or moisture.
- Do not submerge or expose for extended period to water.
- Protect from high humidity and rain.
- Only operate within specified temperature range (0 °C to 40 °C).
- Unplug immediately if liquid has been spilled or object have fallen into the apparatus.
- **Clean only with a dry cloth. Do not use detergents or chemical solvents as this might damage the finish.**
- **Unplug and disconnect external antennas during lightning storms.**
- **Do not remove cover [or back].**
- **Refer servicing to qualified service personnel.**

## ENVIRONMENT

---



### DISPOSAL

According to the European Directive 2002/96/EC all electrical and electronic products must be collected separately by a local collection system.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

## PRODUCT DESCRIPTION

---

Where performance and simplicity are paramount but space is sparse the Eton Sound collection provides brilliant clarity and fidelity for a radio this size and in this price range. Behind the Eton Sound's clean and uncluttered design hides a multitude of technology facilitating higher sound reproduction and better reception.

## WHAT THE ETON SOUND RADIO INCLUDES

---

Owner's manual; remote control.

## PREPARING THE REMOTE FOR USE

---

Grip the plastic piece on the bottom of the remote unit and pull it out.

## POWERING THE ETON SOUND RADIO

---

Plug the Eton Sound Radio Power Cord into an AC (mains) outlet. When it is first plugged in, it will be in the standby mode. In standby mode, only the clock display is activated and the radio is off. To turn the radio on, use a quick, short press of the power button that's on the radio or the remote. To place it back into standby mode, use a quick, short press of the power button.

## VOLUME CONTROL

---

The volume is controlled with the volume knob or the VOL buttons on the remote. Turning the volume knob clockwise increases the volume; counterclockwise decreases volume. Pressing the remote's VOL + increases the volume; pressing the VOL — button decreases the volume.

## VOLUME CONTROL

---

Before place Earphone/Headphone in/on you ears, turn the volume all the way down. Use Headphone/Earphone with 1/8 inch (3.5 mm) stereo plug. Plug them into the earphone socket on the back of the Eton Sound Radio.

## SELECTING AM/FM OR LINE-IN

---

After turning on the radio, use sequential presses of the MODE button on the radio or the remote to select AM/FM or LINE-IN.

## MANUAL TUNING

---

Use quick, short presses of the TUNING/SET buttons to tune up + or down — frequency, or use the remote's TUNE +/- buttons.

## AUTO-SCAN TUNING

---

With auto-scanning the radio stops at the next station with good signal strength. Auto-scan tuning is engaged by a long, 2 second press of the TUNING/SET buttons. To auto-scan up frequency, press  $\Delta$  button. To auto-scan down frequency, press the  $\nabla$  button, or use the remote's TUNE +/- buttons.

## WORKING WITH MEMORY PRESETS

---

There are 10 memory presets total, 5 each for AM, FM. Note that the procedures below will also overwrite what has been previously stored into the memory. That is, a memory cannot be 'erased', but can be overwritten.

1. Using the procedures described previously, tune to the radio station that you wish to store.
2. Press the MEMORY button for 2 seconds; the memory number will flash in the LCD,
3. Immediately select the desired memory number with TUNING/SET buttons.
4. Press the MEMORY button again.

## ACCESSING MEMORY PRESETS

---

Tune to the band of your choice, AM or FM.

Use quick, short presses of the MEMORY button to choose stored station of your choice, or use the remote's buttons 1-5.

## SETTING THE CLOCK, ALARM AND SLEEP TIMER

---

Install two AA batteries to save these settings during power loss or when unplugging the Eton Sound Radio (see diagram).

The clock, alarm, and sleep timer can be set in either 'standby' or 'on' mode.

## SETTING THE CLOCK

---

1. Press the radio's or the remote's TIME SET button for 3 seconds; note that the minutes flash.
2. Use the radio's TUNING/SET buttons or the remote's TUNE +/- buttons to set the minutes.
3. Give the radio's or the remote's TIME SET button a quick, short press: note that the hour flashes.
4. Use the radio's TUNING/SET buttons or the remote's TUNE +/- buttons to set the correct hour.
5. Press the radio's or the remote's TIME SET button to complete the new time setting and to exit the time set mode.

## SETTING THE ALARM TIME:

---

1. Press the radio's or the remote's ALARM button for 3 seconds; note that the hour flashes.
2. Use the radio's TUNING/SET buttons or the remote's TUNE +/- buttons to set the desired wake-up hour.
3. Give the radio's or the remote's ALARM button a quick, short press; note that the minutes flash.
4. Use the radio's TUNING/SET buttons or the remote's TUNE +/- buttons to set the correct minutes.
5. Press the radio's or the remote's ALARM button; note that the speaker symbol flashes for 5 seconds and then disappears. The alarm time is now set.

## ACTIVATING THE ALARM

---

For the alarm to function it must be activated. To do this, use quick, short presses of the radio's or the remote's ALARM button, causing the following to appear in the display:

- ALARM with speaker symbol – wakes you up to a beeper sound.
- ALARM with musical note symbol – wakes you up to the last radio station selected by either tuning or by selecting a memory.
- ALARM, speaker symbol and musical note symbol all disappear from the display, thus deactivating the alarm completely.

## WAKING TO A MEMORY PRESET

---

Tune to the memory preset of your choice, set the alarm time, activate the alarm and place the Eton Sound Radio in standby mode.

## USING THE SNOOZE FEATURE

---

Once the alarm activates, pressing the radio's or the remote's SNOOZE allows cancellation of the alarm for 5 minutes; then the alarm resumes. To completely cancel the snooze setting, press the radio's or the remote's ALARM button.

## SETTING THE SLEEP TIMER

---

The sleep timer enables play for a specified amount of time (15-90 minutes) and then shuts off. When the SLEEP function is enabled, the main display shows the sleep symbol.

- To activate the sleep timer, turn on the radio and press the radio's or the remote's SLEEP button with successive, quick, short presses to select a sleep time of 15-90 minutes (15, 30, 45, 60, 75, or 90). This setup mode is automatically exited after about 4 seconds.
- To deactivate the sleep timer, press the radio's or the remote's SLEEP button with successive, quick, short presses to select OFF. This setup mode is automatically exited after about 4 seconds.

## WARRANTY REGISTRATION

---

To ensure full warranty coverage or product updates, registration of your product should be completed as soon as possible after purchase or receipt. You may use one of the following options to register your product:

1. By visiting our website at <http://www.etoncorp.com>.
2. Mail in enclosed warranty card.
3. Mail your registration card or information to the following address; Include your name, full mailing address, phone number, model purchased, date purchased, retail vendor name and product serial number (typically located in or near the battery compartment):

Etón Corporation  
1015 Corporation Way  
Palo Alto, CA 94303 USA

***etón* Corporation**

Corporate Headquarters

1015 Corporation Way

Palo Alto, California 94303 USA

tel +1 650-903-3866

tel +1 800-872-2228

fax +1 650-903-3867

***etón* Europe/Lextronix Germany**

Rosenstrasse 2

D-10178 Berlin, Germany

tel +49 [0]30 243102149

***etón* Canada**

1 Yonge Street, Suite 1801

Toronto, Ontario M5E 1W7 Canada

tel +1 416-214-6885